

2000-2003 GM SUBURBAN / YUKON XL - V8 4.8/5.3L

Warning: When working on under or around any vehicle exercise caution. Please allow the vehicle's exhaust system to cool before removal, as exhaust system temperatures may cause severe burns. If working without a lift, always consult vehicle manual for correct lifting specifications. Always wear safety glasses and ensure safe work area. Serious injury or death could occur if safety measures are not followed.


Step 1: (Carefully read all instructions before installation)

To remove the OEM exhaust system, you will need to cut the front extension pipe about 1" in front of the muffler. Once you have cut the front extension pipe, remove the muffler and tailpipe from the OEM rubber insulators and extract the assembly from the vehicle. Do not damage the OEM rubber insulators, as they will be re-used to mount the new system. Unbolt the front extension pipe from the catalytic converter extension at the 2-bolt flange and remove it from the OEM rubber insulator. Do not discard the OEM fasteners, as they will be re-used to mount the new front extension pipe.

Step 2: Fit the welded hanger on the new front extension pipe into the OEM rubber insulator and fasten it to the catalytic converter extension using the OEM fasteners. Leave all fasteners loose for final adjustment of the complete system. Slip the inlet end of the muffler over the outlet of the front extension pipe, and fasten it using one of the supplied 3" clamps. Slip the inlet end of the tailpipe over the outlet of the muffler, and fit the welded hangers into the OEM rubber insulators. Use the other supplied 3" clamp to fasten the tailpipe to the muffler.

Step 3: With all components mounted loosely, adjust the system for overall aesthetics and clearance of frame & bodywork. (MAGNAFLOW recommends at least 1/2" of clearance between the exhaust system and any body panels to prevent heat-related body damage or fire.)

Step 4: Once a final position has been chosen for the new system, evenly tighten all fasteners from front to rear. Inspect all fasteners after 25-50 miles of operation and retighten if necessary.

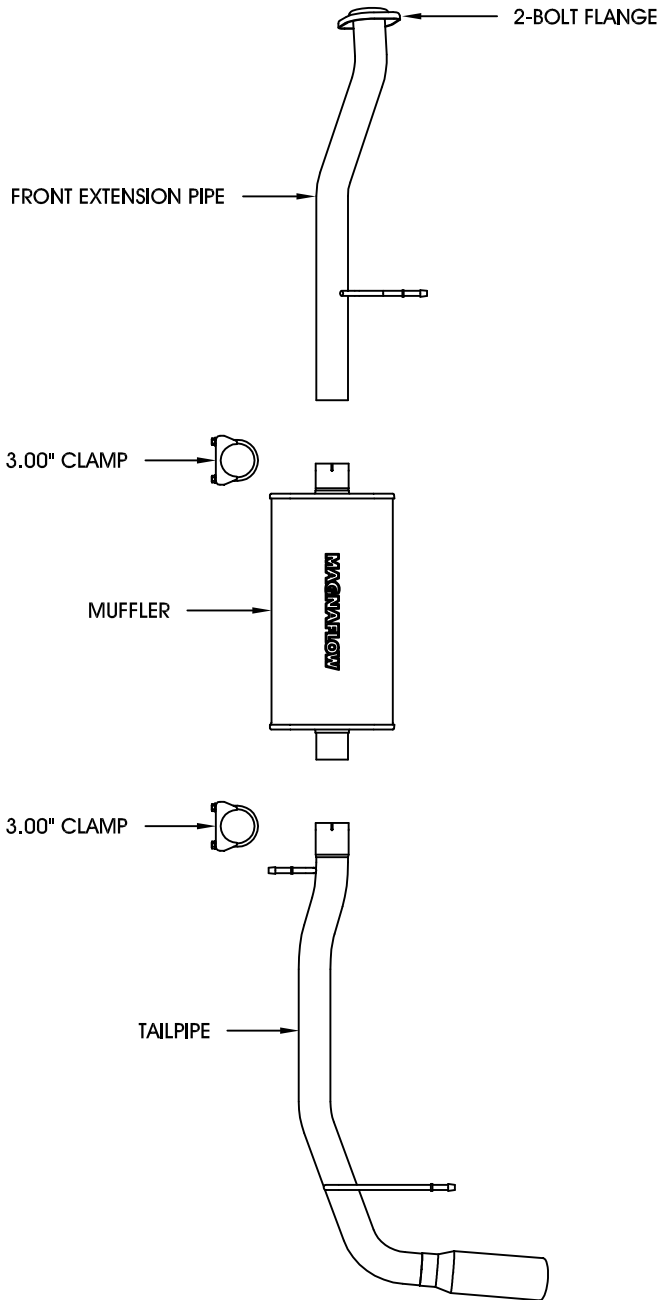

*MAGNAFLOW Performance Exhaust recommends professional installation on all their products

Technical support: 1-800-959-9226 ext. 4500

MAGNAFLOW Performance Exhaust - 22961 Arroyo Vista - Rancho Santa Margarita, CA 92688