
THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner to a heated area will accelerate the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, $409^{\mathbb{R}}$ or Glass Plus^{\mathbb{R}} work well. Use of Armor All^{\mathbb{R}}, Son-of-a-Gun^{\mathbb{R}} or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR DODGE NITRO CARGO LINER

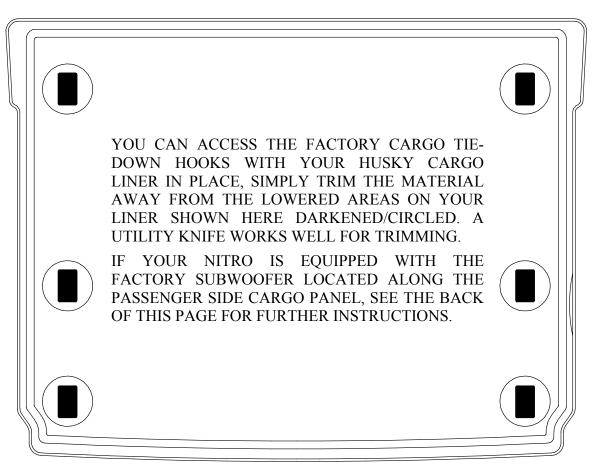

NITRO CARGO LINER SHOWN TRIMMED FOR OPTIONAL FACTORY SUBWOOFER. TO TRIM FOR THIS OPTION, SIMPLY REMOVE THE MATERIAL FROM THE RECESSED AREA MOLDED INTO THE LINER. USE THE EDGE OF THE RECESSED ARC AS YOUR TRIMMING GUIDE.

