
## THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

## CARE AND USE INSTRUCTIONS

Your new liner is custom molded to fit your vehicle. Upon removal from the box your liner will not completely unroll and lay flat. This is normal and only temporary. Just place the liner on the floor or in the back of your vehicle with a weight in each corner (a book works well). After about 15 minutes, your liner will remain flat. In colder climates this "relaxing" may take longer; moving the liner inside will speed up the process.

Your liner is manufactured using an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner,  $409^{\text{(R)}}$  or Glass Plus work well. Use of Armor All , Son-of-a-Gun or similar items is discouraged as these products make the liner slick.

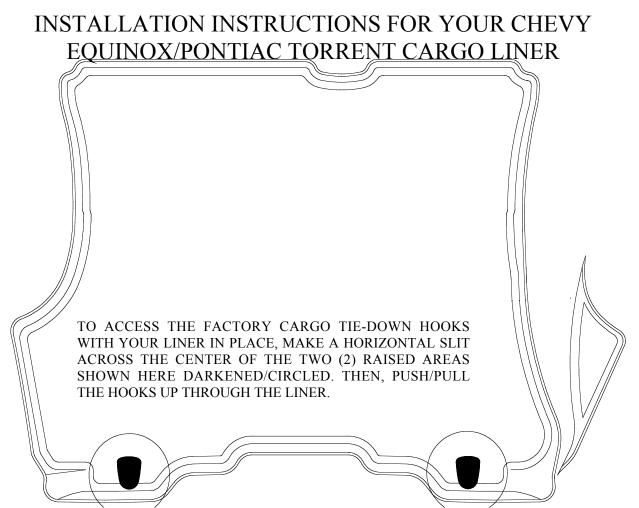

IF YOUR VEHICLE IS EQUIPPED WITH THE OPTIONAL "SUN AND SOUND" STEREO SYSTEM, IT HAS A SUBWOOFER MOUNTED IN THE REAR RIGHT HAND CORNER OF THE CARGO AREA. THIS FEATURE WILL ALSO KEEP YOUR CARGO LINER (AS IT IS BOXED) FROM FITTING CORRECTLY. HOWEVER, YOUR LINER CAN EASILY BE TRIMMED TO ACCOMMODATE THIS FEATURE. TO TRIM, CUT ALONG THE OUTER EDGE OF THE MOLDED STEP AND ALONG THE EDGE OF THE TREAD ON THE RAISED PORTION OF THE LINER. THIS WILL LEAVE A \_" LIP ALONG THE TRIMMED EDGE (SEE BACK OF PAGE FOR TRIMMING PHOTOS)



CARGO LINER SHOWN INSTALLED IN A VEHICLE WITH OPTIONAL "SUN AND SOUND" STEREO SYSTEM. YOU WILL NEED TO TRIM YOUR LINER TO ACCOMMODATE THIS FEATURE. TO TRIM, FOLLOW THE MOLDED-IN TRIM GUIDE (SEE DOTTED LINE IN INSET).