

### DODGE DUAL REAR FLAT MUD GUARD

#### INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

##### Tools Required

- Short Phillips screwdriver
- Cutting tool - for removal of existing plastic fasteners

##### Package Contents

- Driver & passenger side rear mud guard
- #10 screw 1" (qty. 6)
- #10 screw 1 1/2" (qty. 2)
- Fender washer (qty. 8)
- U-clip Lrg. (qty. 8)
- Instruction sheet

**NOTE:** It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing plastic fasteners from locations A, B, C, & D by cutting off the heads of the fasteners and pushing the remaining piece through the liner attachment hole (Figure 1).
3. Pull back fender liner to expose attachment holes (Figure 1).
4. Install a U-clips over the fender lip with U-Clip and fender holes aligned at locations A, B, and C.
5. Place mud guard between fender and fender liner and install #10 screws and washers at locations A, B, and C.
6. Install #10 1 1/2" screw and washer at location D, thru liner, mud guard and fender hole into a U-clip **NOTE: DO NOT PLACE THIS U-CLIP OVER THE FENDER LIP.**

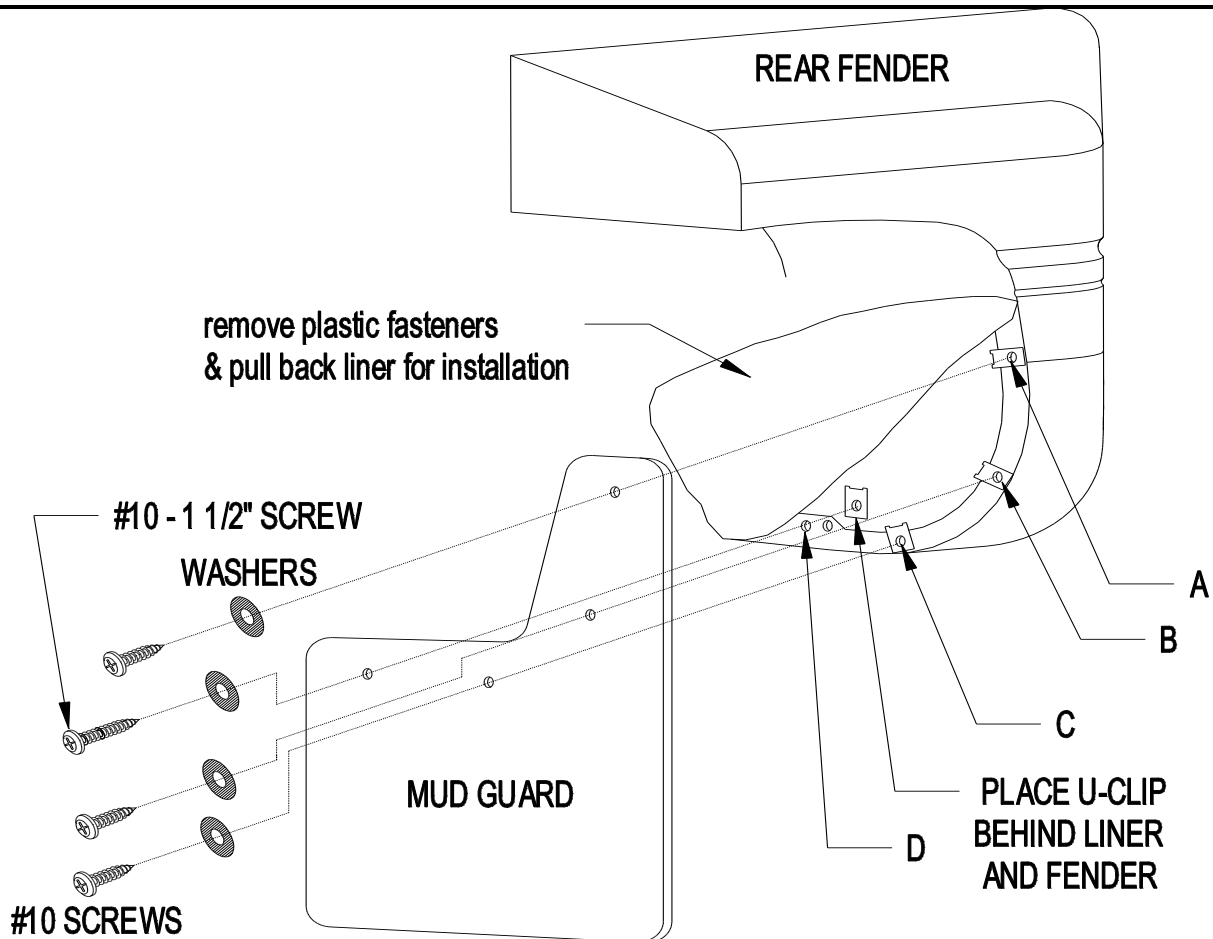


Figure 1