

## FORD F-150 WITH FACTORY FENDER FLARES

### FRONT MUD GUARD INSTALLATION INSTRUCTIONS

*Install Paint Protection Film before mud guards (see other side)*

*Please read instructions thoroughly before installation.*

#### Tools Required


- 1/8" drill bit / Drill
- Short #2 Phillips screwdriver
- Center punch

#### Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 6)
- Washers (qty. 6)
- Instruction sheet

**NOTE:** Turn the front wheels all the way to the left or right for mud guard installation. However, it may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Using the mud guard as a template, place the mud guard against fender, mark, center punch and drill 1/8" hole at location B through flare and fender (Figure 1).
3. Attach mud guard to front fender with #10 screw and washer at location B, check fit and make sure mud guard is parallel to ground before tightening.
4. Mark, center punch and drill 1/8" holes at locations A and C (Figure 1).
5. Install #10 screws and washers at locations A and C.

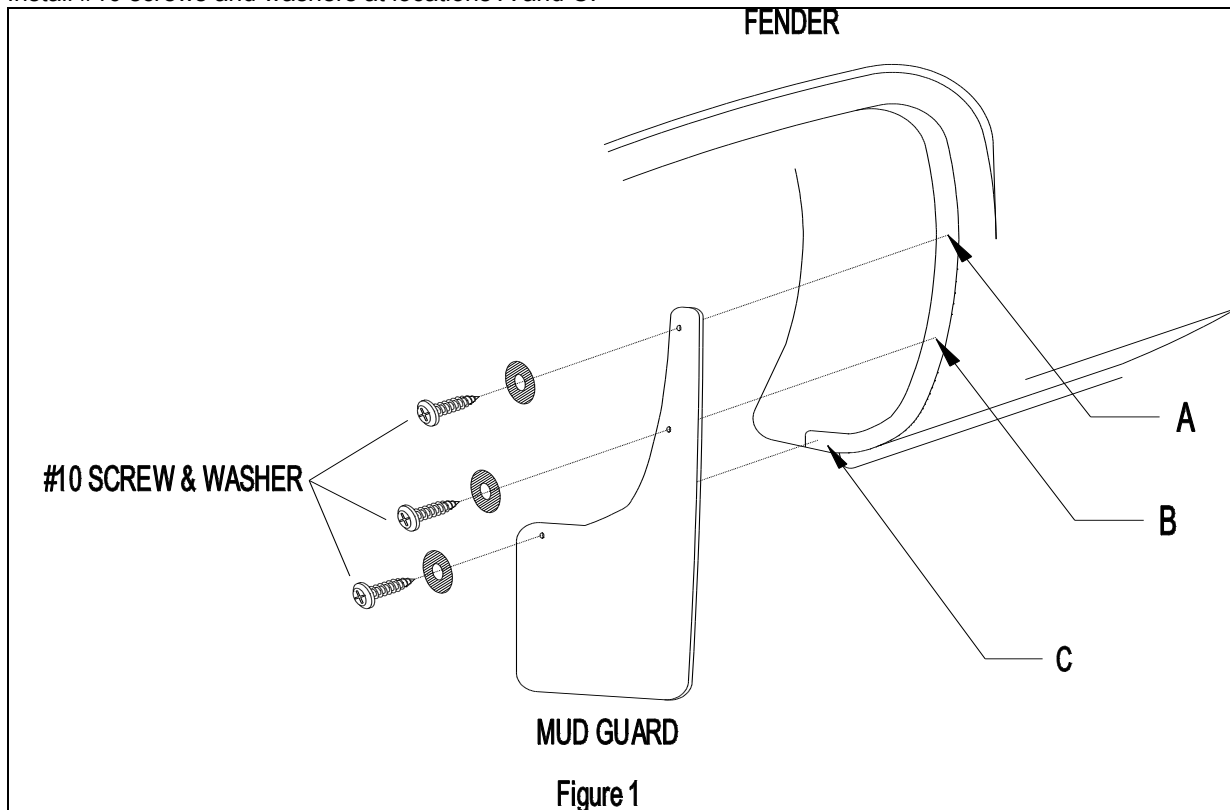

**NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR "EMBLEM" ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.**