

REAR MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required

- 1/8" drill bit / Drill
- Center punch / Hammer
- Short Phillips screwdriver or drill attachment

Package Contents

- Driver & passenger side rear mud guard
- #10 screw (qty. 6)
- Washers (qty. 6)
- U-clip (qty. 6)
- Primer Ampoule (qty. 1)
- Instruction sheet

NOTE: It may be necessary to remove the wheels depending on the tools being used for installation.

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove existing fasteners from locations A and B (Figure 1).
3. Attach mud guard to rear fender with a #10 screw and washer, thru mud guard, fender / fender liner and into a U-clip on the backside of the fender liner at locations A and B (Figures 1 & 2). Check fit and level before tightening.
4. Using mud guard as a template, mark and drill an 1/8" hole at location C and install a #10 screw and washer.

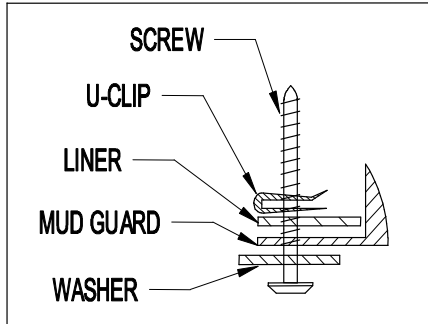


Figure 2

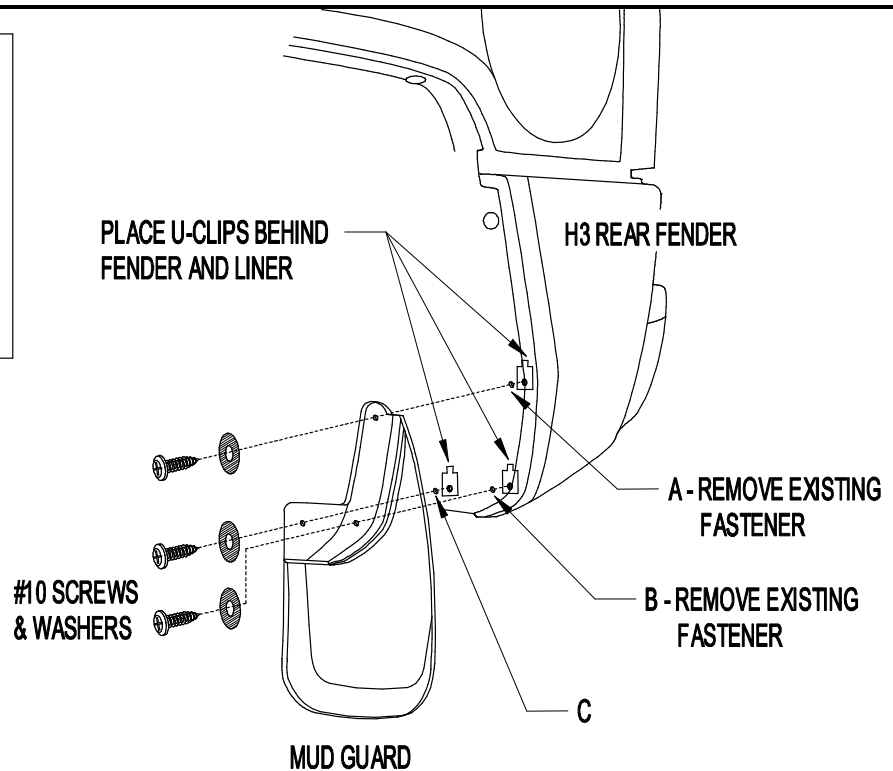


Figure 1

PAINTING INSTRUCTIONS

1. Clean mud guard with a soap and water solution to remove dirt and other contaminants.
2. Sand painting surface with 320 grit sand paper.
3. Apply a coating of flexible primer-adhesion promoter.
4. Apply a flexible paint as directed by the paint manufacturer.

LOGO PLATE INSTALLATION

INCLUDED MATERIALS:

- LEFT AND RIGHT 5777 H3 MUD GUARDS (QTY. 1 SET)
- PRIMER AMPOULE (QTY. 1)

MATERIALS NOT INCLUDED:

- HUMMER H3 LOGO PART NO. 15094459 (QTY. 2)

THE HUMMER H3 LOGO PLATES CAN BE PURCHASED THROUGH YOUR LOCAL HUMMER DEALERSHIP. THE GM PART NO. IS 15094459. A TOTAL OF TWO (2) H3 LOGO PLATES WILL BE NEEDED FOR THE 5777 MUD GUARDS (1 LEFT AND 1 RIGHT)..

INSTALLATION

1. MAKE SURE LOGO POCKET AREA OF MUD GUARDS ARE CLEAN AND DRY (FIG 1).
2. FOR PRIMER APPLICATION, CRUSH PRIMER AMPOULE AT DOT AS INDICATED BY INSTRUCTION ON PRIMER AMPOULE (FIG 2).
3. APPLY A THIN EVEN COAT OF PRIMER TO LOGO POCKET AREA ON MUD GUARD AND ALLOW PRIMER TO DRY. AVOID GETTING PRIMER ON ANY AREA OF THE MUD GUARD THAT WILL BE VISIBLE AFTER LOGO INSTALLATION.
4. REMOVE FILM BACKING FROM H3 LOGO (FIG 3) AND CAREFULLY CENTER AND PRESS FOAM TAPE SIDE OF LOGO TO MUD GUARD LOGO POCKET (FIG 4)
5. APPLY PRESSURE TO LOGO TO MAKE SURE THE LOGO ADHERES EVENLY TO MUD GUARD.

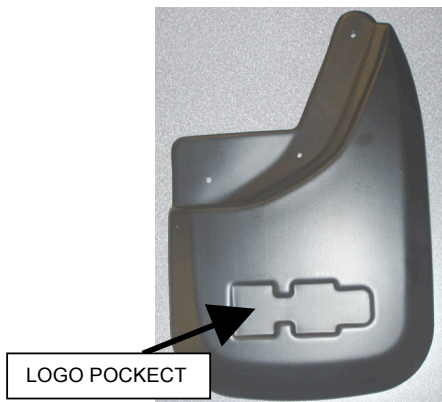


FIG 1

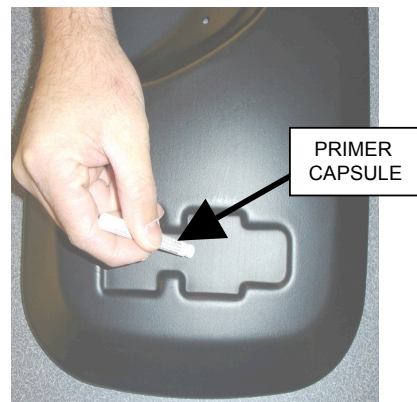


FIG 2

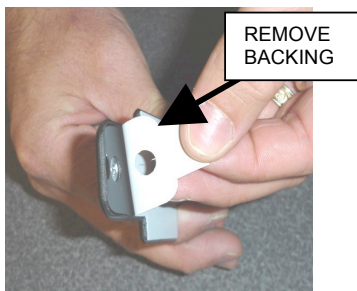


FIG 3



FIG 4