


THANK YOU FOR SELECTING A HUSKY FLOOR LINER FROM WINFIELD CONSUMER PRODUCTS

CARE AND USE INSTRUCTIONS

Your new floors liner is custom molded to fit your particular vehicle. The liner is made to take the place of your factory floor mats. For correct fit, it is necessary to remove the factory floor mats before installing your new floor liner. *However, do not remove the factory-installed carpeting.*

Your liner is made from an engineering resin that is lightweight and extremely tough and durable. The easiest way to clean your liner is with a damp cloth or sponge. If using a cleaner, 409® or Glass Plus® work well. Use of Armor All®, Son-of-a-Gun® or similar items is discouraged as these products make the liner slick.

INSTALLATION INSTRUCTIONS FOR YOUR TOYOTA TACOMA ACCESS CAB SECOND SEAT FLOOR LINER

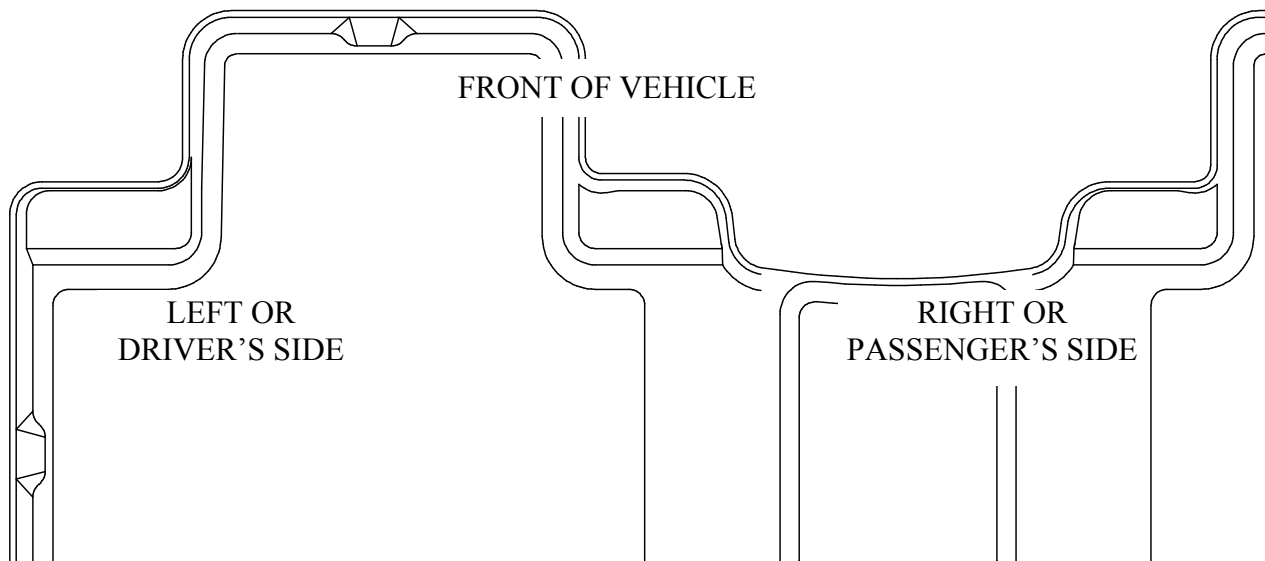

TO EASE INSTALLATION OF YOUR LINER, ADJUST BOTH FRONT SEATS TO THEIR MOST FORWARD POSITION AND FOLD SEATBACKS FORWARD BEFORE INSTALLING LINER. ONCE LINER IS INSTALLED, REPOSITION FRONT ROW SEATS AS DESIRED.