PART NO. **5432**

DODGE RAM LOGO READY
FRONT MUD GUARD INSTALLATION INSTRUCTIONS

Please read instructions thoroughly before installation.

Tools Required
- 1/8” drill bit / Drill
- Short Phillips screwdriver
- Marking utensil (fine tip marker, grease pencil, etc.)

Package Contents
- Driver & passenger side front mud guard
- #10 screw (qty. 4)
- #8 screw (qty.2)
- Washer (qty 6)
- Instruction sheet

1. Clean and degrease the mud guard location area on the fender before installation.
2. Remove factory fastener from location B and attach mud guard to fender with # 8 screw and washer. (Figure 1).
3. Using the mud guard as a template, mark and drill 1/8” holes at locations A and C.
4. Install #10 screw and washer at locations A and C.

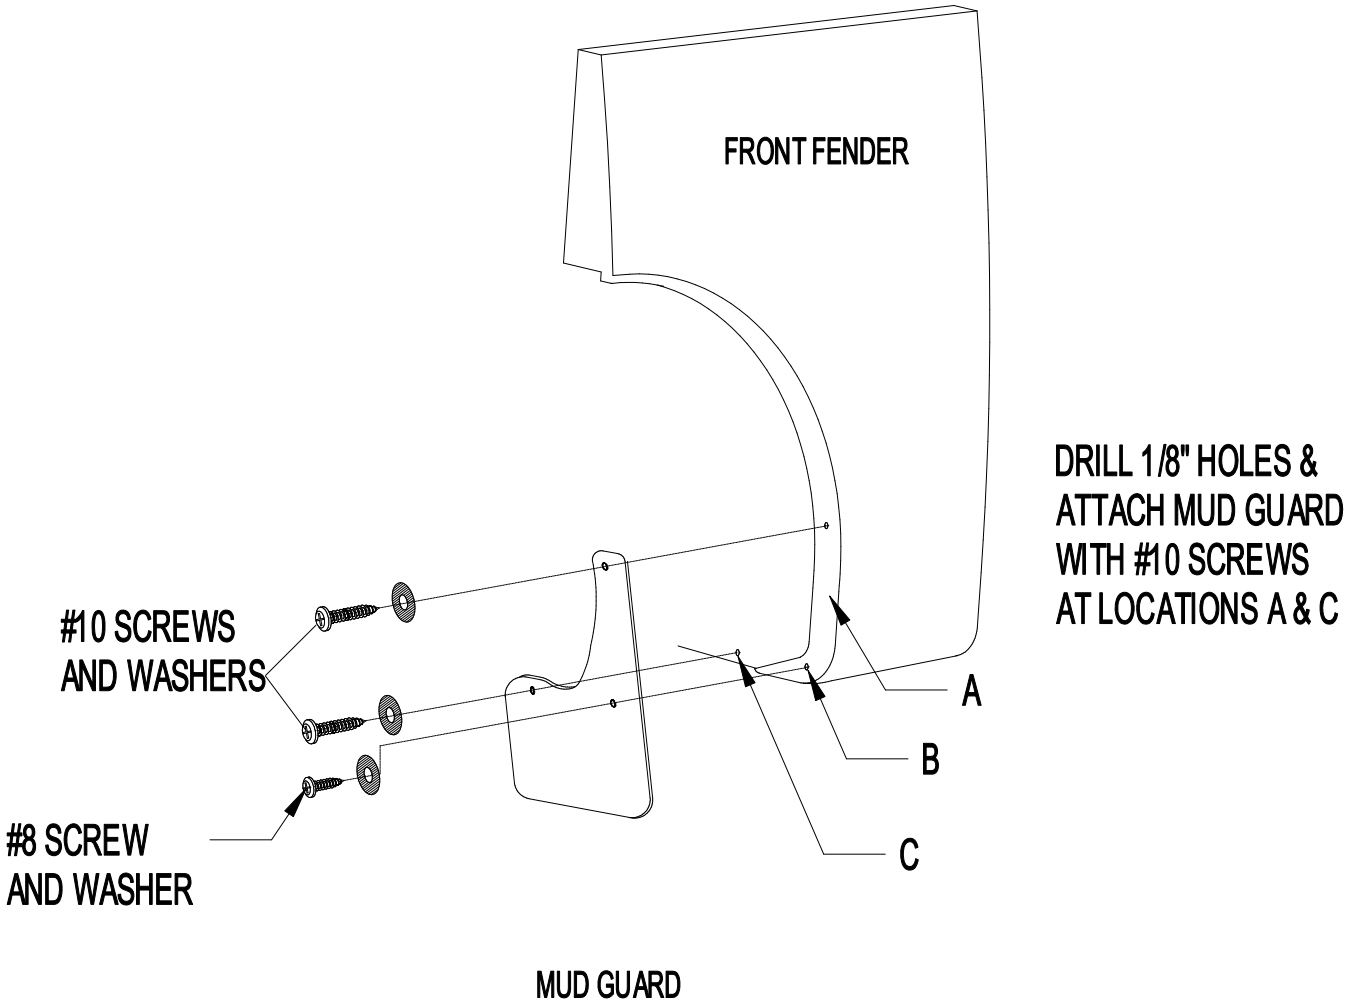

Figure 1

NEED A LOGO FOR YOUR NEW MUD GUARD? TRY AN INTERNET SEARCH FOR “EMBLEM” ON E-BAY, AMAZON OR YOUR FAVORITE AUTOMOTIVE SITE.